 


Franklin®

MWD-1510

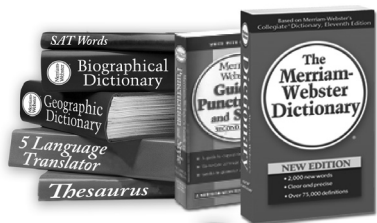

Merriam-Webster's Dictionary & Thesaurus with Spell Correction

User's Guide
www.franklin.com

Please read the following safety warnings and precautions before using your device.
Note: If this device is to be used by young children, this User's Guide should be read to them by an adult and their use of the device should be monitored. Failure to do so may cause injury.

1. Getting Started

1.1 Introduction

Congratulations on your purchase of the MWD-1510, Merriam-Webster® Dictionary & Thesaurus with Spell Correction. The MWD-1510 is a terrific resource for defining thousands of words.

 
You can search for inflected forms of words, correct misspellings, and find synonyms. Or use your device to read about punctuation and style, review geographic and biographic information or find translations of common words. Study rules of grammar and build your vocabulary using a personal word list, an SAT®* word list and many fun vocabulary building exercises and games.

*SAT is a registered trademark of the College Entrance Examination Board, which was not involved in the production of, and does not endorse, this product.

1.2 Installing the Batteries

Your product is powered by two CR-2032 lithium batteries. Follow these easy instructions to install or replace them. Please have the new batteries and a small screwdriver at hand before you remove the old ones.

1. Turn your product off and turn it over.
2. Use the screwdriver to unscrew the battery cover screw.
3. Lift off the battery cover.
4. Remove the old batteries.
Note: Use a paper clip, if necessary, to remove the old batteries.
5. Install the batteries positive (+) side facing up.

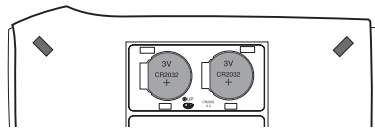


Important: Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.

6. Replace the battery cover and secure it with the screw.
Warning: If the batteries wear-out completely or if you take more than a few seconds while changing the batteries, any information that was entered in the built-in books may be erased. You should always keep written copies of your important information.

Battery Precautions

- Non-rechargeable batteries are not to be recharged. Never recharge batteries that come with the device.
- Rechargeable batteries are to be removed from the device before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Do not expose batteries to direct heat or try to take batteries apart. Follow the battery manufacturer's instructions for battery use.
- Always remove a weak or dead battery from the device.
- To avoid damage caused by leakage of the battery fluid, replace the battery or batteries once every two years regardless of how much the device has been used during that time.
- Should a battery leak, the device may become damaged. Clean the battery compartment immediately, avoiding contact with your skin.
- Keep batteries out of reach of small children. If swallowed, consult a physician immediately.

 1.3 Understanding Your Device

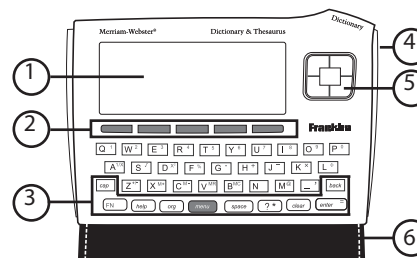

- 1) Screen
- 2) Soft Keys
- 3) Function Keys
- 4) Power Key
- 5) Navigation Key
- 6) Cover

Using the Cover

Attach the cover to the back of the device with the screws provided. Flip the cover upward to protect the screen and the keyboard when not in use.

1.4 Key Guide

Soft Keys

Soft Key functions are represented by the labels displayed along the bottom of the

screen. To perform a Soft Key function, press the unlabeled key at the top of the keyboard that corresponds to the label you want. These labels change to reflect the different functions available in the various books and exercises in this device.

For example, in the main menu, the following Soft Keys are available:

BOOKS Displays the Books menu.

LEARN Displays the Learning menu.

EXER Displays the Exercises menu.

GAMES Displays the Games menu.

SETUP Displays the Setup menu.

Organizer Keys

In the Organizer, the following Soft Keys are available:

CLOCK Goes to the clock.

DATA Goes to the databank.

CALC Goes to the calculator.

CONV Goes to the metric converter.

CURR Goes to the currency converter.

Please refer to the specific topics in this User's Guide to learn the function of any available Soft Keys.

Function Keys

Turns the product on or off.

Displays a help message.

Goes to the main menu. Goes to the word entry screen in any book that has one. Clears the calculator. In the metric converter and databank, goes to its main menu.

Backs up, erases a letter, or turns off the highlight at an entry.

Enters a word, selects an item, or begins a highlight in an entry.

Goes to the Organizer: clock, databank, calculator, metric converter and currency converter.

 
Goes to the main menu.

At a word entry screen, types a ? to stand for a letter in a word. At a menu, displays a menu item. At a dictionary entry, displays the headword. In games, reveals the word and forfeits the game.


Shifts to type capital letters.


 
Shifts to allow **prev**, **next**, **pg up**, **pg**

 

 
down, and to type a hyphen (-).

 Types an underscore.

Combination Keys*

 
 + At a dictionary entry, pages up or down.

 or  + At a dictionary entry, displays the previous or next entry.


 or  +  + At a menu, goes to the first or last menu item. At an entry, goes to the start or end of the entry.

 +  Types a hyphen.






 +  Types an @.

 
 + Types an apostrophe.



 + At a word entry screen, types an asterisk to stand for a series of letters in a word. In games, gives a hint.

Direction Keys

  Move up () , down () , left () , or right () .

 At menus and dictionary entries, pages down. At a word entry screen, types a space.


* Hold the first key while pressing the second.

1.5 For Your Information

Follow the Arrows

The flashing arrows on the right of the screen show which arrow keys you can press to move around menus or view more text.


Help is Always at Hand

 



You can view a help message at any screen by pressing  . Press  or  to read. To exit help, press  .

About Screen Illustrations


Some screen illustrations in this User's Guide may differ slightly from what you see on screen. This does not mean that your unit is malfunctioning.

1.6 Using the Main Menu

 
Use the main menu to quickly take you to different books and exercises in your device. The main menu contains five tabs: *Books*, *Learning*, *Exercises*, *Games* and *Setup*. Use 

and  to move to another tab. Use  and  to highlight the option you want and press  to select it. You can also go directly to a tab by pressing the tab's respective Soft Key.

 Understanding the Menus

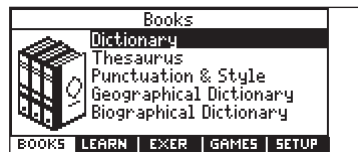

 The **Books** tab enables you to look up definitions, thesaurus entries, information about punctuation and style, geographical information, biographical information, and translate common words.

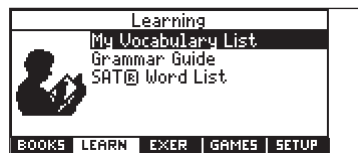

The **Learning** tab enables you to access *My Vocabulary List*, and read grammar lessons. You can also access the SAT® Word List.



The **Exercises** tab allows you to access *Spelling Bee* and *Flashcards*. You can try both exercises using English words saved to *My Vocabulary List* and those found in the SAT® Word List.



The **Games** tab allows you to access the nine games included in your device: *Anagrams*, *Hangman*, *Word Train*, *Word Builder*, *Jumble*, and 2 player *Link Four* and 1 and 2 player *Tic Tac Toe*. You can also adjust the game settings.


 





The **Setup** tab allows you to access a demonstration and tutorial of how this device works. You can also adjust the device settings.

 2. BOOKS Menu





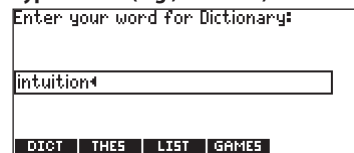

2.1 Finding Dictionary Entries

 
Use the Merriam-Webster Dictionary to look up definitions.


1. Press  .
2. Press **BOOKS**.
3. Use  or  to highlight *Dictionary*, then press  .
4. Type a word (e.g., *intuition*).








To erase a letter, press  .

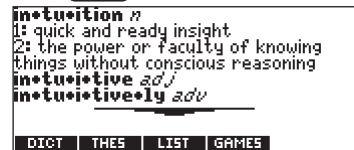 To type a capital, hold  and press a letter key. To type a number, hold  and press  -  . To type a hyphen, hold  and press  .

5. Press  to view the definition.




Press  or  to scroll.


6. Hold  and press  or  to view the next or previous definition.
7. Press  when done.
Press  to go to the main menu.

Understanding Definitions

Entries may consist of headwords, parts of speech, and definitions. Other forms of the word may follow the headword. After the definition, you may see a list of usage examples.


1. Type *knowledge*.
2. Press  .

Misspelling Words


 
If you enter a misspelled word, a list of corrections appears. Highlight the word you want and then press  to see its entry.

Choosing Multiple Forms

Some words in the dictionaries have more than one form (e.g. *resume*, *resumé*). When the word you are looking up has multiple forms, the different forms appear in a list.

Simply highlight the form you want and press  to see its entry. For example, select *Dictionary* from the Books menu, then type *resume* at the word entry screen.







Highlight the form you want and press  to see its entry. To go back to the Multiple Forms list, press  .

 
Understanding Confusables

Confusables are homonyms, homophones and spelling variants that are easy to confuse, e.g. *rain*, *reign*, *rein*. If the word you looked up is a confusable, the **CONF** Soft Key is displayed. Press **CONF** to view the confusables.





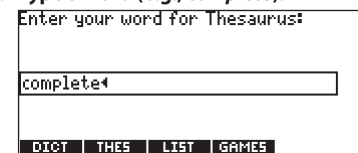

2.2 Using the Thesaurus

Use the Franklin Thesaurus to find synonyms, antonyms and other information about a word.

 
1. Press  .
2. Press **BOOKS**.
3. Use  or  to highlight *Franklin Thesaurus*, then press  .
4. Type a word (e.g., *complete*).








To erase a letter, press  .

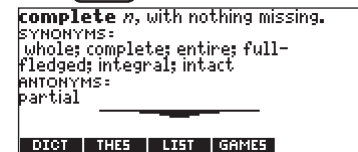To type a capital, hold  and press a letter key. To type a number, hold  and press  -  . To type a hyphen, hold  and press  .

5. Press  to view the thesaurus entry.



Press  or  to scroll.

6. Hold  and press  or  to view the next or previous entry.
7. Press  when done.
Press  to go to the main menu.

 
Understanding Thesaurus Entries

A thesaurus entry consists of a group of synonyms, antonyms and classmates. Synonyms are words that have similar meanings, e.g. *happy/joyous*. Antonyms are words that have the opposite meaning of the word being defined, e.g. *happy/unhappy*. Classmates are words that are related in some way to the word being defined, e.g. *octagon/polygon*, *triangle*, *rectangle*, *pentagon*....

2.3 Highlighting Words


Another way to look up words is by highlighting them in entries or word lists. You can then find their definitions, thesaurus entries, or add them to *My Vocabulary List*.

1. At any text, press **enter** to start the highlight.

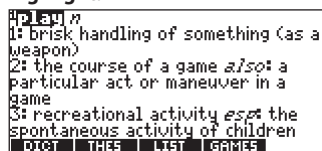

To turn the highlight off, press **back**.

 2. Use the arrow keys to move the highlight to the word you want.

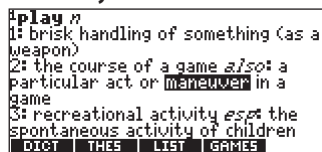

To ... Press ...
define the word **enter**
view the thesaurus **THES**
entry
add word to **LIST**
My Vocabulary List

3. Press **clear** when done.

Press **menu** to go to the main menu.

2.4 Finding Letters in Words

If you are uncertain about how to spell a word, type a question mark (?) in place of each unknown letter. To find prefixes, suffixes, and other parts of words, type an asterisk (*) in a word. Each asterisk stands for a series of letters. **Note:** If you type an asterisk at the beginning of a word, it may take a little while to find the matching words.

1. Go to any word entry screen.

You can access a word entry screen by selecting *Dictionary*, *Thesaurus*, or *5-Language Translator* from the Books menu.

2. Type a word with ?s and *s.

To type an asterisk, hold down **cap** and press **?***.

3. Press **enter**.

4. Press **▼** to move the highlight to the word you want and press **enter** to view its entry.

5. Press **clear** when done.

Press **menu** to go to the main menu.

2.5 Reading About Punctuation and Style

This device contains a book to help you review and learn common rules of punctuation and style.

1. Press **menu**.

 
2. Press **BOOKS**.

3. Use **▲** or **▼** to highlight *Punctuation & Style*, then press **enter**.



4. Use **▲** or **▼** to highlight the topic you want and press **enter**.

Use **▲** or **▼** to highlight a sub-topic, if needed, and press **enter**.

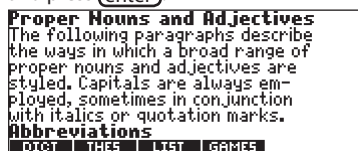

5. Press **space** or **▼** to scroll.

6. Press **clear** when done.

Press **menu** to go to the main menu.

2.6 Finding Geographical Entries

Use the geographical dictionary to find information about current and historical names of places.

1. Press **menu**.

2. Press **BOOKS**.

3. Use **▲** or **▼** to highlight *Geographical Dictionary*, then press **enter**.

Press **▲** or **▼** to scroll through the list of places. You can also type a letter to go to the first place beginning with that letter. For example, type **cor** to highlight *Coral Gables*.



4. Press **enter** at any place name to view its entry.

Press **back** to return to the list.

5. Press **space** or **▼** to scroll.

6. Press **clear** when done.

Press **menu** to go to the main menu.

2.7 Finding Biographical Entries

 
Use the biographical dictionary to find information about current and historical names of people.

1. Press **menu**.

2. Press **BOOKS**.

3. Use **▲** or **▼** to highlight *Biographical Dictionary*, then press **enter**.

Press **▲** or **▼** to scroll through the list of names. You can also type a letter to go to the first word beginning with that letter. For example, type **coro** to highlight *Coronado*.

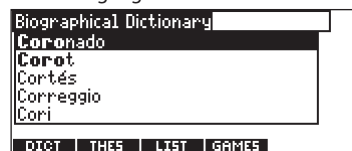

4. Press **enter** at any place name to view its entry.

Press **back** to return to the list.

5. Press **space** or **▼** to scroll.

6. Press **clear** when done.

Press **menu** to go to the main menu.

 
2.8 Using the 5-Language Translator

Use the 5-language translator to translate words to and from English, Spanish, French, German, and Italian.

1. Press **menu**.


2. Press **BOOKS**.

3. Use **▲** or **▼** to highlight *5-Language Translator*, then press **enter**.

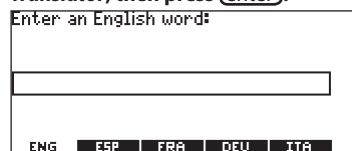

The input language is English by default. Press a language's respective Soft Key to change the input language.

 4. Type a word (e.g., *place*).

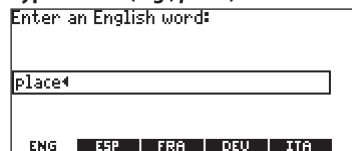

To erase a letter, press **back**.

To type a capital, hold **cap** and press a letter key. To type a number, hold **FN** and press **Q** - **P**. To type a hyphen, hold **FN** and press **J**.

5. Press **enter** to view the translations.



Press **space** or **▼** to scroll.

6. Press **clear** when done.

Press **menu** to go to the main menu.

3. LEARN Menu

3.1 Using My Vocabulary List

You can save up to 40 words in *My Vocabulary List* for personal study or review. *My Vocabulary List* is saved between sessions unless your product is reset.

 
Adding Words from the Learning Menu

1. Press **menu**.

2. Press **LEARN**.

3. *My Vocabulary List* will be highlighted. Press **enter** to select it.

4. Press **▲** or **▼** to highlight *Add a Word* and press **enter**.

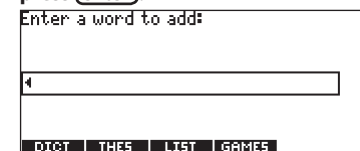

5. Type a word.

6. Press **enter** to add the word.

7. Press **clear** when done.

Adding Words from a Word Entry Screen

You can add words to *My Vocabulary List* directly from any word entry screen.

 
1. Press **menu**.

2. Press **BOOKS**.

3. Use **▲** or **▼** to highlight *Dictionary*, then press **enter**.

4. Type the word you want to add to your word list (e.g., *poignant*).

5. Press **LIST**.

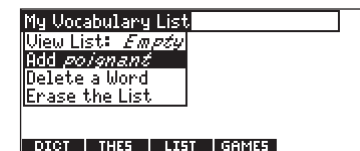

Your selection is included in the menu item.

6. Press **enter** to add the word.

- Press **clear** to return to the word entry screen.

Press **menu** to go to the main menu.

Adding Highlighted Words

You can also add words to *My Vocabulary List* from definitions and correction lists. First highlight a word and then press **LIST**. Add "your word" will be highlighted. Press **enter** to add the word.

Adding Words Not in This Dictionary

When you add a word not in this dictionary, you are given three options: *Add Anyway*, *Cancel* and *Correction List*. Highlight the option you want and press **enter**. **Caution:** Adding words that are not in this dictionary uses considerably more memory than adding words that are. If you add only words that are not in this dictionary, *My Vocabulary List* may contain as few as 10 words.

Viewing My Vocabulary List

- Press **menu**.
- Press **LEARN**.
- My Vocabulary List** will be highlighted. Press **enter** to select it.
View List... will be highlighted.
View List: Empty will be displayed if either is empty.
- Press **enter** to view the list.
- Highlight a word on the list.
- Press **enter** to view its definition.

Removing a Word from My Vocabulary List

- Press **menu**.
- Press **LEARN**.
- My Vocabulary List** will be highlighted. Press **enter** to select it.
- Press **▲** or **▼** to highlight *Delete a Word* and press **enter**.
- Highlight the word you want to delete and press **enter** to delete that word.

Erasing My Vocabulary List

- Press **menu**.
- Press **LEARN**.
- My Vocabulary List** will be highlighted. Press **enter** to select it.
- Press **▲** or **▼** to highlight *Erase the List* and press **enter**.
- Press **Y** to erase the list or press **N** to cancel.

3.2 Reading the Grammar Guide

Your device includes an outline of English grammar topics such as parts of speech, phrases, clauses, the correct usage of punctuation, and so on.

- Press **menu**.
- Press **LEARN**.
- Press **▲** or **▼** to highlight **Grammar Guide**, then press **enter**.



Each major section is composed of topics and sub-topics.

- Press **▲** or **▼** to highlight the topic you want to study and then press **enter**.
- If necessary, highlight the sub-topic you want and press **enter**.
- Press **space** or **▼** to read.

If a topic contains a quiz to help you review the rules described in that topic, the **QUIZ** Soft Key will be displayed. Press **QUIZ** to begin the quiz. Follow the instructions on the screen to complete the quiz. To exit the quiz, press **back**.

- Press **FN** + **▶** or **◀** to view the next or previous topic.
- Press **back** to return to the list of topics.
- Press **clear** or **menu** when done.

3.3 Using the SAT® Word List

The SAT® Word List is available to you to review and learn English words like those you might find on the Scholastic Aptitude Test.

- Press **menu**.
- Press **LEARN**.
- Press **▲** or **▼** to highlight **SAT® Word List**, then press **enter**.



Press **▲** or **▼** to scroll through the SAT® Word List. You can also type a letter to go to the first word beginning with that letter. For example, type **gre** to highlight *gregarious*.

Press **enter** at any word to view its definition. Press **back** to return to the list.

4. EXERCISES Menu

Using Exercises, you can test your spelling and improve your vocabulary.

4.1 Spelling Bee

- Press **menu**.
- Press **EXER**.
You can choose *My Spelling Bee* which uses words from *My Vocabulary List* or *SAT® Spelling Bee* which uses words from the *SAT® Word List*.
- Press **▲** or **▼** to highlight the one you want, then press **enter**.
A word will flash on the screen for you to spell.



- Type in the word you just saw and press **enter** to see if you spelled it right.
- Press **enter** to see the definition of the word.
Press **back** to return to *Spelling Bee*.
- Press **space** for a new word.
- Press **clear** or **menu** when done.

4.2 Flashcards

- Press **menu**.
- Press **EXER**.
You can choose *My Flashcards* which uses words from *My Vocabulary List* or *SAT® Flashcards* which uses words from the *SAT® Word List*.
- Press **▲** or **▼** to highlight the one you want, then press **enter**.

A word will appear on the screen for you to study or define. If needed, press **enter** to see the definition. Press **back** to return to *Flashcards*.



- Press **space** for a new word.
- Press **clear** or **menu** when done.

5. GAMES Menu

You have nine fun games to choose from.

5.1 Changing Game Settings

Before you play, you can choose the source of the words, the skill level, the language, and whether or not graphics will be used.

- Press **menu**.
- Press **GAMES**.
- Hold down **cap** and press **▼** to highlight **Game Settings**, then press **enter**.



- Use **▲** or **▼** to move **▶** to **Words, Skill, or Graphics**.
Words chooses the source of the words: *All of them*, *My Vocabulary List*, *Enter your own*, *Learn a Word List*, or *SAT® Word List*.
Skill determines how easy or difficult a game is.
- Use **▶** or **◀** to change the setting(s) you want.
- Press **enter** when done.

5.2 Selecting a Game

In the Games menu, use **▲** or **▼** to move the highlight to the game of your choice and press **enter**.

5.3 Getting Help in the Games

During any game you can read instructions by pressing **help**.

You can get a hint by holding **cap** and pressing **7*** or reveal the game word by pressing **7***.

Note: If you reveal the game word, you lose the round.

6. SETUP Menu

6.1 Changing the Settings

When using this device, you can activate the *Learn a Word* feature, adjust the screen contrast, the shutoff time, and the type size. The shutoff time is how long your product stays on if you forget to turn it off.

- Press **menu**.
- Press **SETUP**.
You can also press **◀** or **▶** until you reach the Setup menu.
- Settings** will be highlighted. Press **enter** to select it.



- Press **▲** or **▼** to move **▶** to *Learn a Word*, *Contrast*, *Shutoff*, or *Type Size*.
- Press **◀** or **▶** to change the setting. Your changes are automatically saved.
- Press **enter** when done. Press **clear** to return to the Setup menu.

Learn a New Word

Your dictionary comes with a *Learn a Word* feature to help you increase your vocabulary. Each time you turn your dictionary on, you can see a random headword.

6.2 Viewing a Demonstration or Tutorial

- Press **menu**.
- Press **SETUP**.



You can also press **◀** or **▶** until you reach the Setup menu.

- Press **▼** to highlight either *Tutorial* or *View Demo* and press **enter**. To stop the demonstration or exit from the Tutorial and return to the Setup menu, press **clear**.

7. ORGANIZER Menu

7.1 Using the Clock

The clock displays the current time and date. You can save two times: Home time and World time.

- Press **org**.



Press **CLOCK** to toggle between Home time and World time.

- Press **enter** to set the time and date.

- Use **▲** or **▼** to scroll through the options in the highlighted field.
- Use **▶** or **◀** to move to another field.
- Press **enter** when done. Press **clear** to exit without saving the settings.
- Set the World time the same way you set the Home time.

7.2 Using the Databank

Adding Entries

You can store as many as 100 names, telephone numbers, and addresses in the databank. The total number of names you can add depends on the size of each entry.

- Press **org** and then press **DATA**.



- Highlight *Add an Entry* and then press **enter**.

- Type a name and press **enter**.
- Type a phone number and press **enter**.
Note: **Q** - **P** will type numbers 0-9 automatically. To type a letter from this row, hold **FN** and press the letter key. To type a hyphen, hold **FN** and press **J**.
- Type a postal address or e-mail address and press **enter**. To type an @, hold **FN** and press **M**.

Viewing or Editing Entries

- Press **org** and then press **DATA**.
- Highlight *View: XX entries (XX% free)* and then press **enter**.
- To edit an entry, highlight it and press **enter**.

Type your changes. Use **◀** or **▶** to move the cursor; use **back** to delete.

- Press **enter** to move to the number field. Press **enter** twice to move to the address field.
- Press **enter** again to save your changes or hold down **FN** and press **back** to cancel your changes.

Deleting Entries

- Press **org** and then press **DATA**.
- Highlight *Delete an Entry* and then press **enter**.
- Highlight the entry you want to delete and press **enter**.
- To delete all databank entries, highlight *Erase the List* in the Databank Menu and then press **enter**.

Press **Y** to erase all databank entries or **N** to cancel the deletion.

Using a Password

You can use a password to prevent unauthorized access to the databank. **Warning!** Always write the password in a safe, separate location. If you lose or forget the password, you will be able to use the databank again only by removing the batteries from your device, which will permanently erase all the information stored in the databank.

 
- Press **org** and then press **DATA**.
- Highlight *Set Password* and then press **enter**.



- Type a password of up to eight characters and press **enter**. Use **◀** to move the cursor; use **back** to delete.
- Press **C** to confirm or **clear** to cancel the password. The password you set will be requested the first time that the databank is used during a session.
- To change the password, repeat Steps 1-4. To remove a password, press **enter** at the blank password screen.

7.3 Using the Calculator

- Press **org** and then press **CALC**.

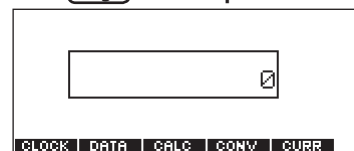

- Type a number. Note: **Q** - **P** will type numbers 0-9 automatically. You can type up to 10 digits. To type a decimal, press **G**(.). To change the sign of a number, press **Z**(+/-).
- Press a math function key.
- Type another number.
- Press **enter**. Or press **F**(%) to calculate a percentage. To repeat the calculation, press **enter** again.

To Calculate ...	Press ...
reciprocals	A (1/x)
squares	D (x²)
square roots	S (√x)
negative numbers	Z (+/-)

- Press **clear** to clear the current calculations.

Using the Calculator Memory

Try the following equation to practice using the calculator memory:

$$(32 \times 12) - (8 \times 8) = 320$$

- Press **org** and then press **CALC**.
- Press **B**(MC) to clear the calculator memory, if necessary.
- Type 32, press **K**(x), type 12, and then press **enter**.
- Press **X**(M+) to add the result to memory. M indicates when a number is stored in memory.
- Type 8, press **K**(x), type 8, and then press **enter**.
- Press **C**(M-) to subtract the result from the number stored in memory.
- Press **V**(MR) to retrieve the number from memory.
- Press **clear** to clear the calculator.

7.4 Using the Metric Converter

- Press **org** and then press **CONV**.



- Type **▼** to select a conversion category (e.g., *Weights*).
- Select a conversion (e.g., *grams/ounces*).
- Type a number after one of the units. Note: **Q** - **P** will type numbers 0-9 automatically. Press **▲** or **▼** to move between the lines. Press **back** to delete a number.
- Press **enter** to convert.
- Press **clear** to clear the current conversion.

7.5 Using the Currency Converter

- Press **org** and then press **CURR**.



- Enter a conversion rate. The rate should be in units of the other currency per one unit of the home currency (n other/1 home). For example, to convert between U.S. dollars and euros, enter an exchange rate of 1.3374. This means that 1.3374 U.S. Dollars is the equivalent of 1 euro.
- Enter an amount for the home or other currency.

Press ▲ or ▼ to move between the lines. Use **(back)** to delete a number.

4. Press **(enter)** to convert.

5. Press **(clear)** to clear the current conversion.

8. Additional Information

8.1 Resetting Your Product

 
If the keyboard fails to respond, or if the screen performs erratically, perform a system reset by following the steps below.

1. Hold **(clear)** and press **(C)**.

If nothing happens, try Step 2.

2. Use a paper clip to gently press the reset button on your unit.

The reset button is recessed in a pin-sized hole on the back of your device.

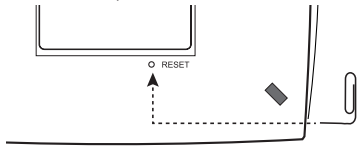

Warning! Pressing the reset button with more than light pressure may permanently disable your product. In addition, resetting the product erases settings and information entered in its built-in books.

8.2 Specifications

Model MWD-1510: Merriam-Webster® Dictionary & Thesaurus with Spell Correction

• **Batteries:** two CR-2032 lithium

• **Size:** 3 5/8 x 5 1/4 x 5/8 in

• **Weight:** 4.868 oz

© 2002-2011 Franklin Electronic Publishers, Inc., Burlington, N.J. 08016-4907 U.S.A. All rights reserved.

© 1995-2005 Merriam-Webster, Incorporated. All rights reserved.

ISBN 978-1-59074-675-2



8.3 Product Care

Your device is designed to be light, compact and durable. However, it is an electronic device and must be treated carefully. Putting unnecessary pressure on it or striking the device against other objects can cause damage.

In order to avoid damage to your device, please:


- Keep the lid closed when you are not using it.

This will protect the screen from being broken, scratched or marred in any way.

- Do not drop, crush, bend, or apply excessive force to the device.
- Do not expose your device to moisture, extreme or prolonged heat, cold, humidity, or other adverse conditions. Avoid storing it in damp, humid or wet places. It is not waterproof.
- Clean the device by spraying a mild glass cleaner onto a cloth and wipe its surface. Do not spray liquids directly on your device.
- Should the device's display glass break, properly dispose of the product avoiding contact with your skin, then wash your hands immediately.
- Please keep screen protectors and plastic bags away from babies and children to avoid danger of suffocation.

8.4 Recycling and Disposal


Device Disposal

 This device should be disposed through your local electronic product recycling system – do not throw into the trash bin.

Packaging Disposal

Please save this User's Guide and all packing materials, as they contain important information. In case of disposal, please refer to your local recycling system.

Battery Disposal

 Do not dispose of batteries with normal household waste. Please obey your local regulations when disposing of used batteries.

This unit may change operating modes, lose information stored in memory, or fail to respond due to electrostatic discharge or electrical fast transients. Normal operation of this unit may be re-established by pressing the reset key, by pressing **(C)** or by removing and replacing the batteries.

8.5 License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE PRODUCT. YOUR USE OF THE PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use this PRODUCT.

You may not make any copies of the PRODUCT or of the data stored therein at the time of purchase, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the PRODUCT. You may not export or reexport, directly or indirectly, the PRODUCT without compliance with appropriate governmental regulations. The PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated by Franklin. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

8.6 FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

–Reorient or relocate the receiving antenna.

–Increase the separation between the equipment and receiver.

–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

–Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

9. Warranty Information

9.1 Disclaimer of Warranties

Except as specifically provided herein, Franklin makes no warranty of any kind, express or implied, with respect to this product.

9.2 Limited Warranty (U.S.)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES, AND LIMITED REMEDY

FRANKLIN WARRANTS TO THE ORIGINAL PURCHASER THAT THIS PRODUCT WILL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT. THIS LIMITED WARRANTY DOES NOT COVER DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT, OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, IS REPAIR OR REPLACEMENT AT THE SOLE OPTION OF FRANKLIN AND THIS REMEDY APPLIES ONLY IN THE CASE IN WHICH FRANKLIN DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THAT THE DEFECT AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS THE EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

EXCEPT FOR THE LIMITED WARRANTY EXPRESSLY RECITED ABOVE, THIS FRANKLIN PRODUCT IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY OR FOR FRANKLIN AND SPECIFICALLY DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. FRANKLIN SHALL NOT HAVE ANY LIABILITY TO THE PURCHASER OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR CORRUPTED DATA, OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF FRANKLIN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR EVEN IF OTHERWISE FORESEEABLE. FRANKLIN IS NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. FRANKLIN'S MAXIMUM AGGREGATE LIABILITY SHALL NOT EXCEED THE AMOUNT PAID FOR THE PRODUCT AS EVIDENCED BY THE SALES RECEIPT. SOME STATES/JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

Warranty Service: If you think your product is defective, call Franklin's Customer Service Desk, 1-800-266-5626, to request a return merchandise authorization ("RMA") number, before returning the product (transportation charges prepaid) to:

Franklin Electronic Publishers, Inc.
Attn: Service Department
One Franklin Plaza
Burlington, NJ 08016-4907

If you return a Franklin product, please include your name, address, telephone number, a brief description of the defect and a copy of your sales receipt as proof of your original date of purchase. You must also write the RMA prominently on the package if you return the product; otherwise there may be a lengthy delay in the processing of your return. Franklin strongly recommends using a trackable form of deliver to Franklin for your return.

9.3 Limited Warranty (EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of two years from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.

9.4 Limited Warranty (outside U.S., EU and Switzerland)

Notwithstanding the disclaimer of warranties above, this product, excluding batteries and liquid crystal display (LCD), is guaranteed by Franklin to be free of defects in materials or workmanship for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect in workmanship or materials during that time.

Products purchased outside the United States, the European Union and Switzerland that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This warranty does not affect the consumer's statutory rights.